

Contents

Introductory pages		
About this manual	0-5	
Introduction to the Dodge Aries and Plymouth Reliant	0-5	
Vehicle identification numbers	0-6	
Buying parts	0-8	
Maintenance techniques, tools and working facilities	0-8	
Jacking and towing	0-15	
Booster battery (jump) starting	0-16	
Automotive chemicals and lubricants	0-17	
Conversion factors	0-18	
Safety first!	0-19	
Troubleshooting	0-20	
<hr/>		
Chapter 1		1
Tune-up and routine maintenance	1-1	
<hr/>		
Chapter 2 Part A		2A
2.2L and 2.5L four-cylinder engines	2A-1	
<hr/>		
Chapter 2 Part B		2B
2.6L four-cylinder engine	2B-1	
<hr/>		
Chapter 2 Part C		2C
General engine overhaul procedures	2C-1	
<hr/>		
Chapter 3		3
Cooling, heating and air conditioning systems	3-1	
<hr/>		
Chapter 4		4
Fuel and exhaust systems	4-1	
<hr/>		
Chapter 5		5
Engine electrical systems	5-1	
<hr/>		
Chapter 6		6
Emissions and engine control systems	6-1	
<hr/>		
Chapter 7 Part A		7A
Manual transaxle	7A-1	
<hr/>		
Chapter 7 Part B		7B
Automatic transaxle	7B-1	
<hr/>		
Chapter 8		8
Clutch and driveaxles	8-1	
<hr/>		
Chapter 9		9
Brakes	9-1	
<hr/>		
Chapter 10		10
Suspension and steering systems	10-1	
<hr/>		
Chapter 11		11
Body	11-1	
<hr/>		
Chapter 12		12
Chassis electrical system	12-1	
<hr/>		
Wiring diagrams	12-17	
<hr/>		
Index	IND-1	IND